


Keyboard Shortcuts:

alt-Z	CANCEL any paste operation that is in progress	<i>(also a menu item)</i>
alt-A	clear ring buffer (256k buffer used for serial input)	<i>(also a menu item)</i>
alt-C	clear graphics layer	<i>(also a menu item)</i>
alt-D	clear text layer	<i>(also a menu item)</i>
alt-P	paste from clipboard	<i>(also a menu item)</i>
alt-L	STOP/RESUME logging	<i>(also a menu item)</i>
alt-R	RESET terminal	<i>(also a menu item)</i>
alt-> and <	bell volume level up and down	
alt-U	hide/show cursor	
alt-B	send break, signals 1455 firmware to reset Micromite	
alt-ZERO	send null character (also ctrl-ZERO for VT102 compatibility)	
alt-ENTER	send CR + LF character sequence	
alt-1 to 4	set/clear modem control (DTR/RTS) outputs	
alt-7	direct control string input – enter mixed text and control characters	
ctrl-SPACE	try to restore last valid connection, or disconnect if already connected	

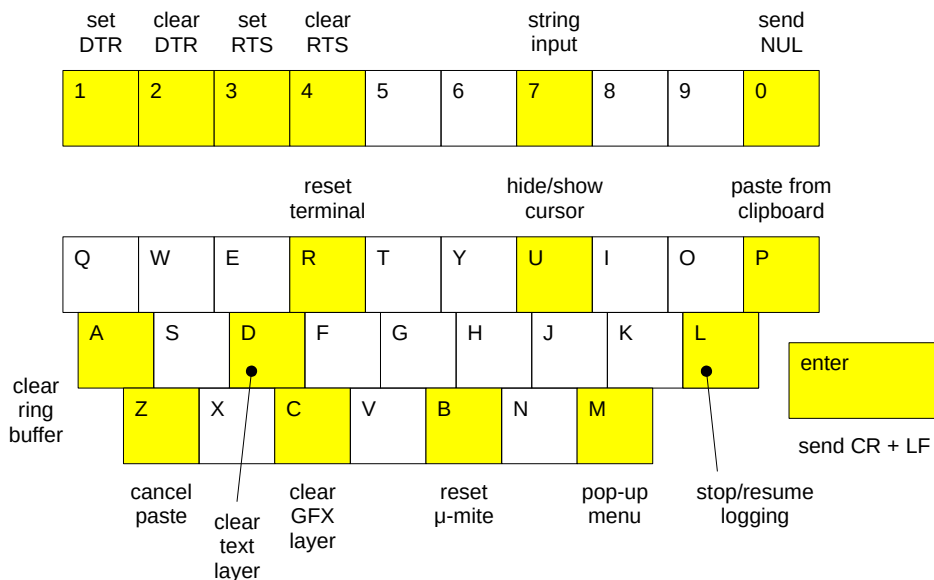

Note that with most LINUX keyboards, pressing ctrl-3 to ctrl-7 will produce the control characters between 27₁₀ and 31₁₀. This saves trying to remember the more cryptic 'official' keys for each:

27 ₁₀	ctrl-3	[
28 ₁₀	ctrl-4	\	
29 ₁₀	ctrl-5]	
30 ₁₀	ctrl-6	~ or ^	(both are shifted)
31 ₁₀	ctrl-7	/ or _	(underscore shifted)

Status Line:

Above the terminal screen area is a status line that displays various useful pieces of information about the terminal session. This includes last ASCII character displayed and key pressed, current cursor location, timing information, and various status indicators:

```
00 row=01 col=01 key=00 00.0s 00.0s 00% online logging [000000] DTR RTS CTS dsr
1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11.
```

1. last ASCII character displayed
2. cursor position, current row
3. cursor position, current column
4. last ASCII key pressed
5. time since last serial data received
6. time since last serial data transmitted
7. percentage of ring buffer in use
 - silver <10% used
 - blue 10% to 39% used
 - yellow 40% to 69% used
 - red >70% used
8. online annunciator - green when connected to a serial port
9. logging annunciator - yellow when logging to a file
10. number of characters waiting to be pasted:
 - green fast paste
 - blue slow paste
11. status of modem control lines. DTR and RTS controlled from keyboard:
 - UPPERCASE line is set (asserted)
 - lowercase line is clear