

Partial VT220 Command Set

Character: Action:

<input checked="" type="checkbox"/>	BELL (7)	Beeps the terminal.
<input checked="" type="checkbox"/>	BS (8)	Moves the cursor back one column.
<input checked="" type="checkbox"/>	HT (9)	Moves the cursor to the next tab stop. (tabstops are fixed at every 8 characters)
<input checked="" type="checkbox"/>	LF (10)	Moves the cursor down one row.
<input checked="" type="checkbox"/>	CR (13)	Moves the cursor to column one.
<input checked="" type="checkbox"/>	CAN (24)	Cancels an Escape sequence.
<input checked="" type="checkbox"/>	ESC (27)	Starts an Escape Sequence.

Escape Sequences recognized are:

	NAME	DESCRIPTION	CODE SEQUENCE
<input checked="" type="checkbox"/>	CUU	Cursor Up	ESC [Pn A
<input checked="" type="checkbox"/>	CUD	Cursor Down	ESC [Pn B
<input checked="" type="checkbox"/>	CUF	Cursor Forward	ESC [Pn C
<input checked="" type="checkbox"/>	CUB	Cursor Backward	ESC [Pn D
<input checked="" type="checkbox"/>	CUP	Cursor Position	ESC [Pn ; Pn H
<input checked="" type="checkbox"/>	HVP	Horizontal and Vertical Position	ESC [Pn ; Pn f
<input checked="" type="checkbox"/>	IND	Index	ESC D
<input checked="" type="checkbox"/>	NEL	Next Line	ESC E
<input checked="" type="checkbox"/>	HTS	Horizontal Tabulation Set	ESC H
<input checked="" type="checkbox"/>	RI	Reverse Index	ESC M
<input checked="" type="checkbox"/>	DECSTBM	Set Top and Bottom Margin (only used by IND, NEL, and RI)	ESC [Pn ; Pn r
<input checked="" type="checkbox"/>	DECSAVC	Save Cursor and attributes	ESC 7
<input checked="" type="checkbox"/>	DECRES	Restore Cursor and attributes	ESC 8
<input checked="" type="checkbox"/>	ED	Erase in Display 0 - cursor to EOD 1 - BOD to cursor 2 - full display (ansi: cursor to 1,1)	ESC [Ps J
<input checked="" type="checkbox"/>	EL	Erase in Line 0 - cursor to EOL 1 - BOL to cursor 2 - full line	ESC [Ps K
	DCH	Delete CHaracter	ESC [Pn P
	DL	Delete Line	ESC [Pn M
	ICH	Insert CHaracter	ESC [Pn @
	IL	Insert Line	ESC [Pn L
	ECH	Erase CHaracter	ESC [Pn X
	TBC	Tab Clear 0 - clear tab at current position 3 - clear all tab stops	ESC [Ps g

	DECKPAM Keypad Numeric Mode	ESC >
	DECKPNM Keypad Application Mode	ESC =
	RM Reset Mode	ESC [Ps l
	SM Set Mode	ESC [Ps h
	IRM 4 Insert/Replacement mode	
	LMN 20 Line feed/New line Mode	
	DECCKM ? 1 Cursor/application Keypad Mode	
	DECOM ? 6 Origin/absolute Mode	
	DECAWM ? 7 AutoWrap at end-of-line Mode	
	SCS Select Character Set	ESC (Px
	A - ASCII Set	
	B - ASCII Set	
	0 - Special Graphics	
<input checked="" type="checkbox"/>	SGR Select Graphic Rendition	ESC [Ps m
	0 - normal	
	1 - bold	
	2 - dim foreground	
	4 - underlined	
	5 - blinking (not supported)	
	7 - reverse video	
	30 to 37 - foreground colour	
	39 - use default foreground colour	
	40 to 47 - background colour	
	49 - use default background colour	
	RIS Reset to Initial State	ESC c
	DECSTR Soft Reset	ESC [! p
<input checked="" type="checkbox"/>	DSR Get Cursor Position	ESC [6 n
	terminal responds with:	
	"ESC [Pn ; Pn R"	