



Switch S1 to run, Bulk caps charge and UV/LED lights and goes off when VCaps=Vin. Contactor closes automatically and Run LED flashes at 2Hz until mains has ramped up. When ramped up Run lamp will now flash at 1Hz and Mains up can activate mains output. Switch S1 to "stop", which activates VLow, Run Lamp goes off & main DC Contactor opens

Title WG39 Rev6 Auto Start Version		
Size A4	Number	Revision
Date: 6/06/2024	Sheet of	
File: D:\Altium\4KW Nano R6 Auto Start - Cop	D:\Altium\4KW Nano R6 Auto Start - Cop	